




**American
International**
Car Stereo Installation Kits & Accessories

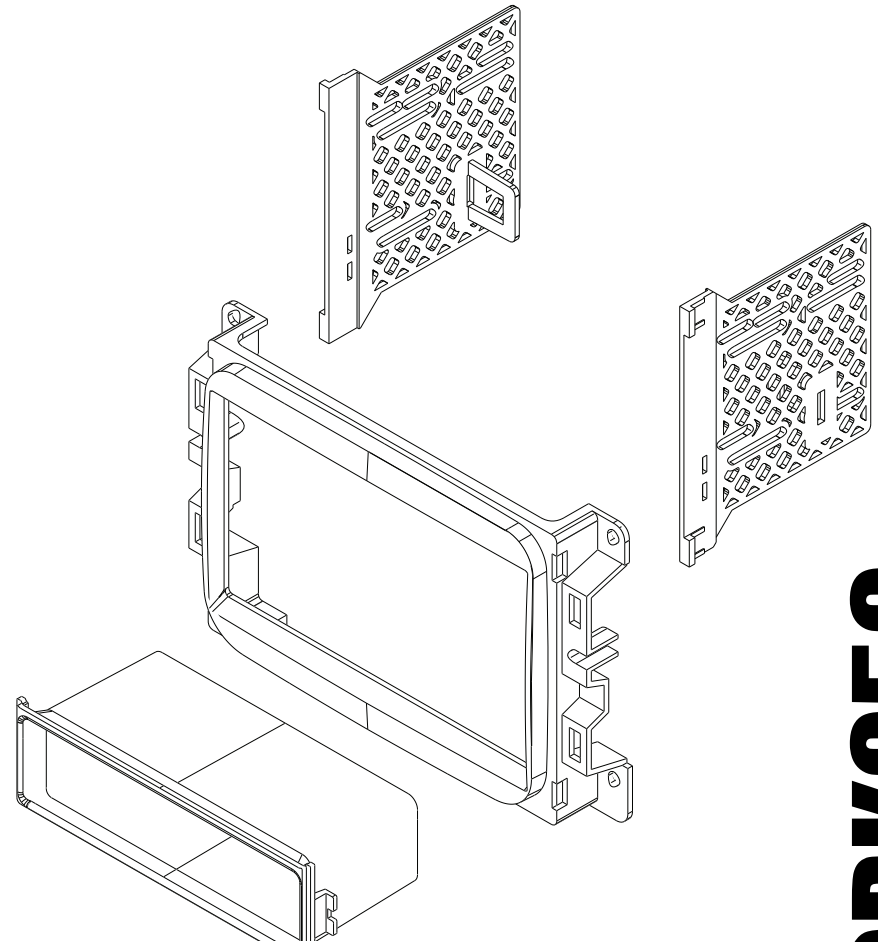

CDK656 Mounting Kit



American International

WWW.AIUS.NET

2500 East Francis Street Ontario, CA 91761, U.S.A.
USA Sales (800) 336-6500

CUSTOMER HELP LINE
USA 800-323-4329

VEHICLE APPLICATIONS

Dodge
2013-16 RAM


NOTE: THIS INSTALLATION KIT REQUIRES PROFESSIONAL INSTALLATION.
MAJOR SUB-DASH MODIFICATION IS REQUIRED TO FIT RADIO.

DASH DISASSEMBLY INSTRUCTIONS

1. Inside the tray at the top center of the dash remove liner and remove (2) screws.
2. Carefully remove panel surrounding the radio, including the climate controls and air vents.
3. Remove(4) screws and remove radio. Unplug all harness and antenna cables.
4. The OEM metal support will need to be modified to make room for the new radio. The right and left bottom corners can be cut and removed.

SINGLE ISO w/POCKET INSTALLATION INSTRUCTIONS

1. Insert ISO brackets to rear of kit as shown in Figure A
2. Insert pocket into lower section of kit from rear & lock into slots of mounting brackets.
3. Insert ISO mountable radio between ISO mount brackets and loosely attach to sides of radio using screws provided with radio when possible or screws supplied with kit.
4. Slide radio forward or backward for desired look and tighten screws.
5. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (Optional)

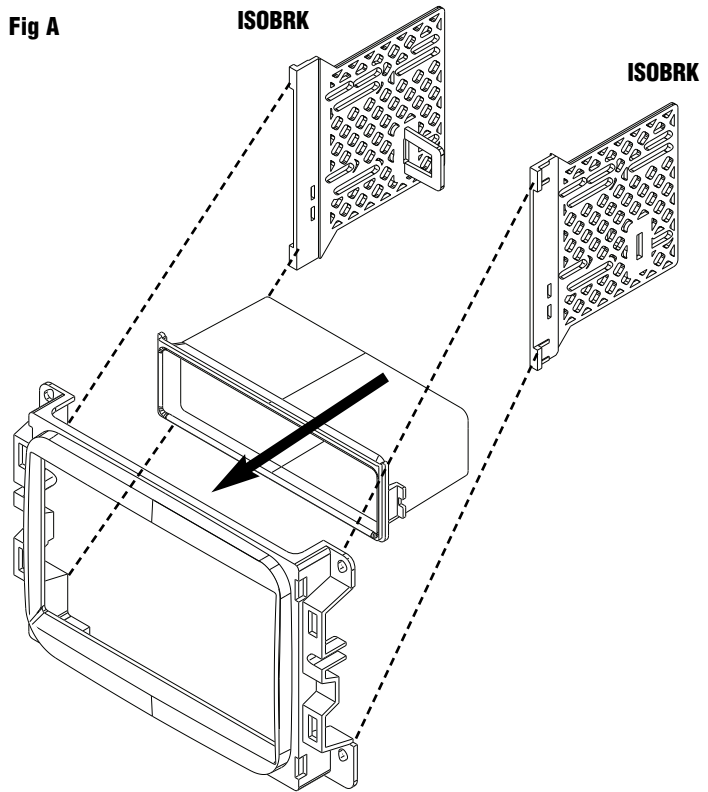

DOUBLE DIN INSTALLATION INSTRUCTIONS

1. Attach ISO brackets to the rear of the main mounting kit.
2. Slide radio into kit from rear & attach to ISO mounting brackets using screws supplied with radio when possible or screws supplied with kit (do not tighten screws at this time).
3. Slide radio forward or backward for your desired look and then tighten the mounting screws.
4. Attach a rear support bracket to the rear of the new radio and adjust as necessary to support the weight of the radio (Optional)

