


CF-K510

KIT ASSEMBLY

FOR DIN MOUNT APPLICATIONS

Insert DIN sleeve from your new radio into the radio opening of the installation kit and depress the tabs to secure sleeve to kit.


NOTE: Aftermarket DIN sleeve is only supplied with radio.

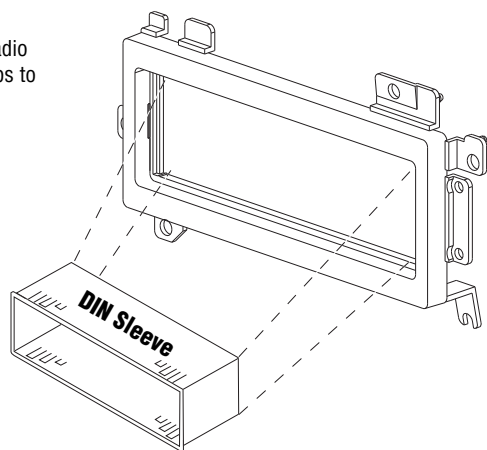

FOR ISO MOUNT APPLICATIONS

Note: ISO trim ring use optional for both DIN and ISO mount applications.

Insert ISO mounting brackets into radio opening, as shown in illustration, and attach radio to brackets using screws supplied with radio or kit. only when ISO Mounting radio.

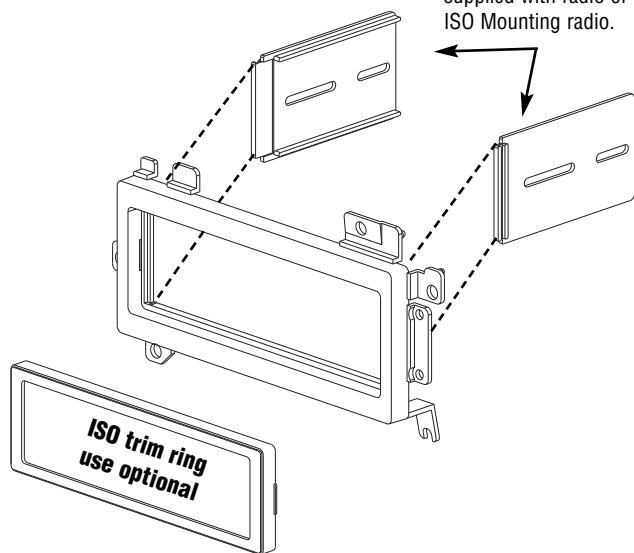

Note: It is recommended to support the rear weight of the radio.


CUSTOMER HELP LINE

USA 800-323-4329 • Canada 800-245-8777

iCFK510



American International
Car Stereo Installation Kits & Accessories

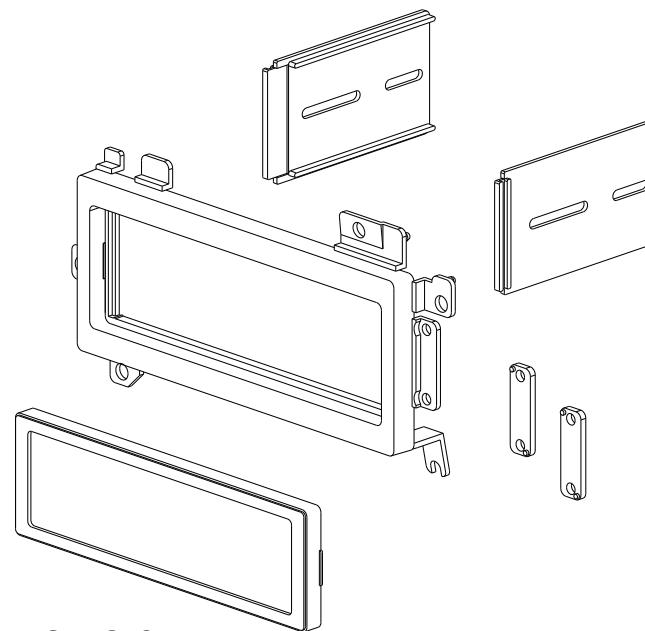

VEHICLE APPLICATIONS

Chrysler

1982-87 400/600K
1995-00 CIRRUS
1993-97 CONCORDE
1975-83 CORDOBA
1984-90 E CLASS
1979-93 FIFTH AVENUE
1994-97 LHS
1979-94 IMPERIAL
1977-81 LE BARON
1987-95 LE BARON SEDAN
1985-89 LE BARON GTS
1982-95 LEBARON COUPE (CONVT.)
1975-83 NEWPORT
1975-97 NEW YORKER
1995-00 SEBRING
1996-00 SEBRING (CONVT.)
1984-00 TOWN & COUNTRY

Dodge

1981-89 ARIES
1976-80 ASPEN
1995-00 AVENGER
1984-00 CARAVAN
1975-91 CHARGER
1987-00 DAKOTA TRUCK
1984-94 DAYTONA
1977-89 DIPLOMAT
1998-00 DURANGO

1988-93

DYNASTY
1993-97 INTREPID
1984-89 LANCER
1978-79 MAGNUM XE
1980-83 MIRADA
1975-78 MONACO
1995-99 NEON
1978-90 OMNI
1974-01 RAM PICKUP
1974-93 RAMCHARGER
1982-87 RAMPAGE
1987-94 SHADOW
1989-95 SPIRIT
1979-81 ST. REGIS
1978-00 VAN
1981-82 024
1995-00 STRATUS

Eagle

1993-97 VISION

Jeep

1997-01 CHEROKEE
1996-98 GRAND CHEROKEE
1997-02 WRANGLER

Plymouth

1989-95 ACCLAIM
1996-00 BREEZE
1985-88 CARAVELLE SE
1975-78 FURY

1975-89 GRAND FURY
1978-90 HORIZON
1987 LASER
1996-99 NEON
1981-89 RELIANT
1983-84 SCAMP
1987-94 SUNDANCE
1981-90 TC3
1985-86 TOURISMO, DUSTER
1974-91 TRAILDUSTER
1981-92 VAN
1976-80 VOLARE
1984-00 VOYAGER

Ford

1985-91 AEROSTAR
1979-89 CROWN VICTORIA
1975-91 ECONOLINE VAN
1984-90 ESCORT/EXP/PONY
1979-86 LTD
1983-88 RANGER/BRONCO II
1980-88 THUNDERBIRD



Lincoln

1983-87 CONTINENTAL
1985-89 TOWN CAR

Mercury

1980-82 COUGAR
1979-85 GRAN MARQUIS

CFK510 Mounting Kit

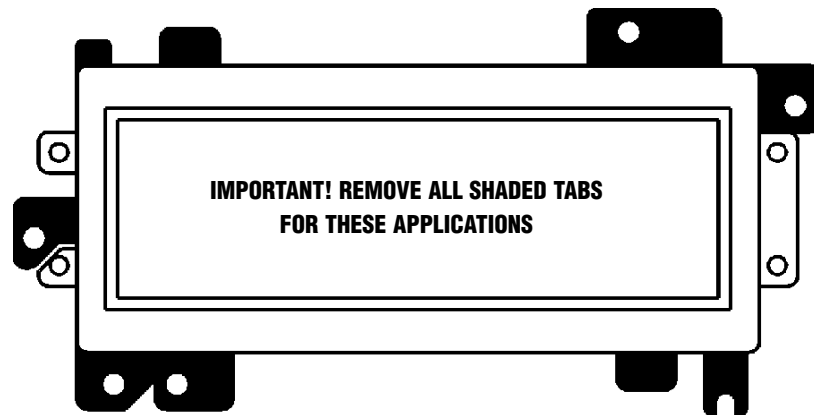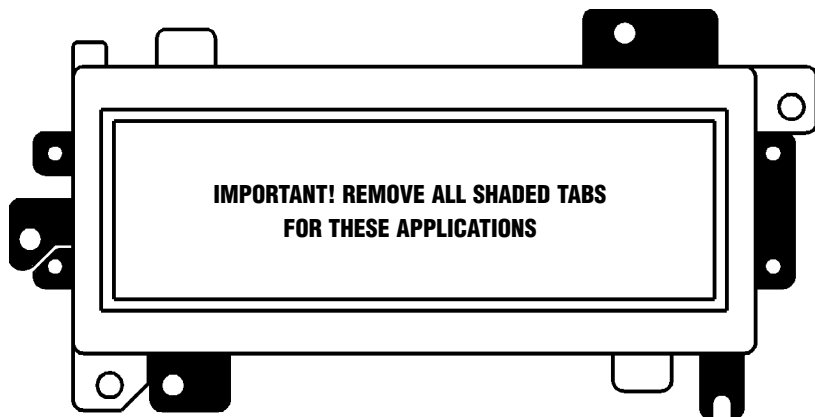

Chrysler

- 1993-97 CONCORDE
- 1975-83 CORDOBA
- 1984-90 E CLASS
- 1994-97 LHS
- 1979-94 IMPERIAL
- 1984-86 LASER
- 1977-81 LE BARON
- 1987-95 LE BARON SEDAN
- 1985-89 LE BARON GTS
- 1982-95 LEBARON COUPE (CONVT.)
- 1975-83 NEWPORT
- 1975-97 NEW YORKER
- 1984-00 TOWN & COUNTRY

Dodge

- 1981-89 ARIES
- 1976-80 ASPEN
- 1984-00 CARAVAN
- 1975-91 CHARGER
- 1987-00 DAKOTA TRUCK
- 1984-94 DAYTONA
- 1977-89 DIPLOMAT
- 1998-00 DURANGO
- 1988-93 DYNASTY
- 1993-97 INTREPID
- 1984-89 LANCER
- 1978-79 MAGNUM XE
- 1980-83 MIRADA
- 1975-78 MONACO
- 1995-99 NEON
- 1978-90 OMNI

- 1974-01 RAM PICKUP
- 1974-93 RAMCHARGER
- 1982-87 RAMPAGE
- 1987-94 SHADOW
- 1989-95 SPIRIT
- 1979-81 ST. REGIS
- 1978-00 VAN
- 1981-82 024

Eagle

- 1993-97 VISION

Jeep

- 1997-01 CHEROKEE
- 1996-98 GRAND CHEROKEE
- 1997-02 WRANGLER

Plymouth

- 1989-95 ACCLAIM
- 1985-88 CARAVELLE SE
- 1975-78 FURY
- 1975-89 GRAND FURY
- 1978-90 HORIZON
- 1995-99 NEON
- 1981-89 RELIANT
- 1983-84 SCAMP
- 1987-94 SUNDANCE
- 1981-90 TC3
- 1985-86 TOURISMO, DUSTER
- 1981-93 TRAILDUSTER
- 1981-92 VAN
- 1976-80 VOLARE
- 1984-99 VOYAGER


Ford

- 1985-91 AEROSTAR
- 1979-89 CROWN VICTORIA
- 1975-91 ECONOLINE VAN
- 1984-90 ESCORT/EXP/PONY
- 1979-86 LTD
- 1983-88 RANGER/BRONCO II
- 1980-88 THUNDERBIRD


Lincoln

- 1983-87 CONTINENTAL
 - 1985-89 TOWN CAR
- MERCURY**
- 1980-82 COUGAR
 - 1979-85 GRAN MARQUIS

NOTE: Optional mounting spacers are included for vehicles listed above that may require the kit to be spaced forward.

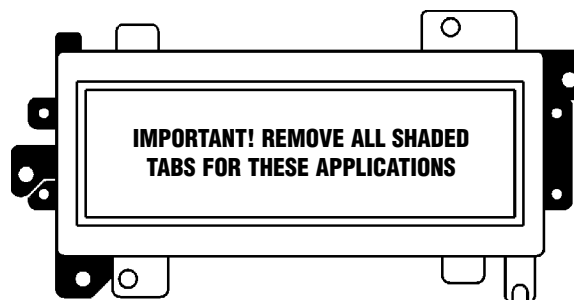

- CHRYSLER
- 1995-00 SEBRING
- DODGE
- 1995-00 AVENGER
- JEEP
- 1993-95 GRAND CHEROKEE

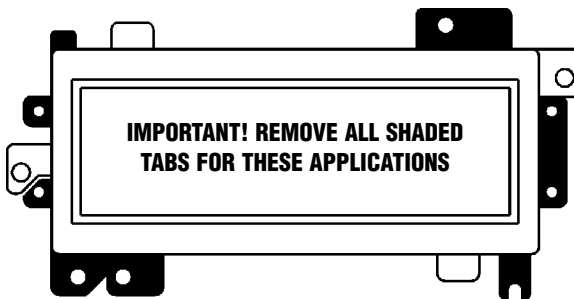

- Chrysler**
- 1995-00 CIRRUS
- 1996-00 SEBRING (CONVT.)
- Dodge**
- 1995-00 STRATUS
- Plymouth**
- 1996-00 BREEZE

WIRE HARNESS AVAILABLE • CALL FOR APPLICATIONS