


IN-DASH STEREO INSTALLATION KIT FOR 2009-UP HONDA PILOT

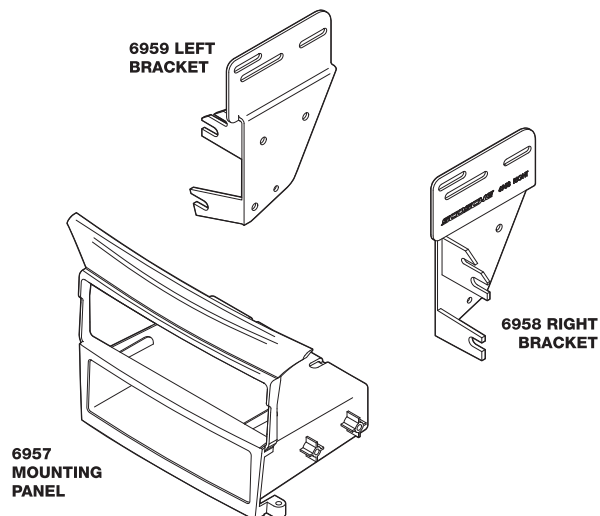

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2009-Up Honda Pilot vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over a test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory airbag wiring. - airbags can accidentally deploy causing serious injury or death.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

HA11B

2008-Up Honda

HAAB

2006-Up Honda
Antenna Adapter

HA11B



HAAB



LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/ codes and information pertaining to installation of this kit (HA1711B) in 2009 Honda Pilot vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3.**

FACTORY STEREO REMOVAL

2009-UP HONDA PILOT

1. Set parking brake and with pick tool, unclip shift lock cover and shift in to drive.
2. With panel removal tool, unclip, unplug and remove side dash panels to the left and right of the stereo.
3. Extract (2) Phillips head screws securing pocket underneath stereo, unplug and remove.
4. Extract (4) Phillips head screws securing stereo and A/C controls, unplug and remove.
5. Extract (4) Phillips head screws securing A/C controls to stereo and remove.
6. Remove (3) clips above stereo by extracting (2) Phillips head screws from each clip (clips will be used for kit assembly).

MOUNTING THE STEREO

DIN-ISO MOUNT

1. Attach the (3) clips removed during disassembly to 6957 panel (see figure 1).
2. Attach 6958 and 6959 brackets to panel using supplied screws (see figure 2).
3. Align and attach aftermarket single din stereo to the brackets using the screws supplied with the stereo.
4. Attach and screw A/C controls to 6957 panel and finish reassembly.

FIGURE 1

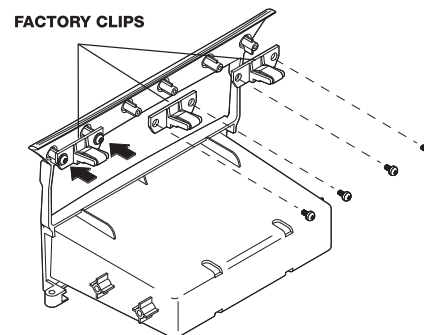


FIGURE 2

