


MOUNTING THE RADIO

ISO DOUBLE DIN MOUNT

1. Snap the 6370 left & right brackets to the wedge locations on the 6343 mounting panel.
2. Snap locations are located on the sides of the recessed mounting panel radio opening.
3. When the brackets are secured to the panel, align the aftermarket double din radio to the mounting holes of the brackets. When placed properly use supplied screws from aftermarket double din radio to secure radio to assembled kit.

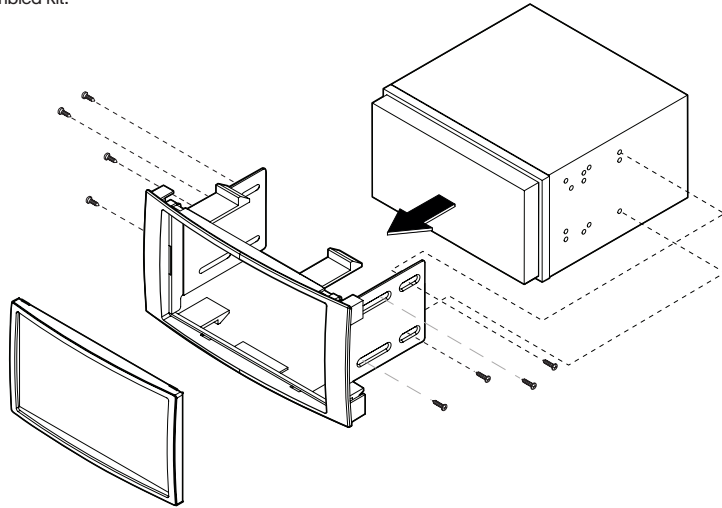

RADIO REMOVAL


2004-06 VOLKSWAGEN TOUAREG

1. Insert four (4) Volkswagen radio removal tools (DT-2) to release radio.
2. Remove radio and disconnect.

SCOSCHE®

VW2342B

2004-06 VOLKSWAGEN TOUAREG DOUBLE DIN KIT

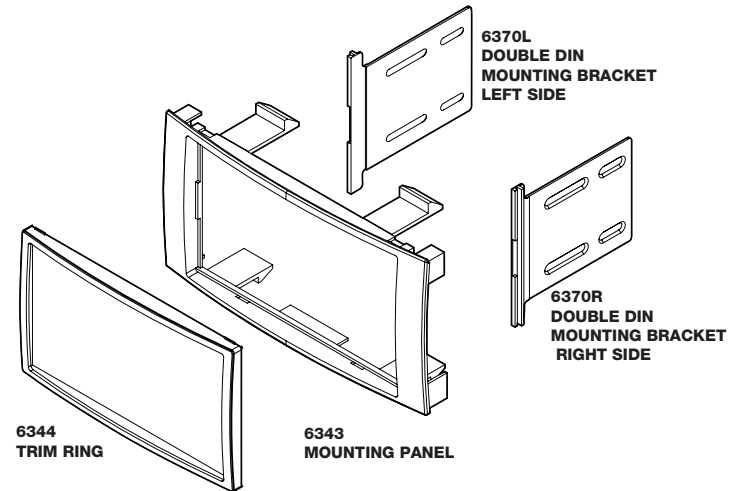

INTRODUCTION / PRELIMINARY

This premium installation kit is for 2004-06 Volkswagen Touareg vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION:

Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over a test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory air bag wiring - air bags can accidentally deploy causing serious injury or death.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: www.scosche-cars.com

CAR STEREO CONNECTIONS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

VW03B

2002-Up
Volkswagen
& BMW

VWA4B

2003-Up Audi/BMW/VW
antenna adapter



LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this VW2342B kit for 2004-06 Volkswagen Touareg vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at:

1-800-621-3695x3

©2007 SCOSCHE INDUSTRIES, INC.

SI 6/07 VW2342B (3000003)