


# SCOSCHE® VW2340 2004-UP VOLKSWAGEN TOUAREG KIT

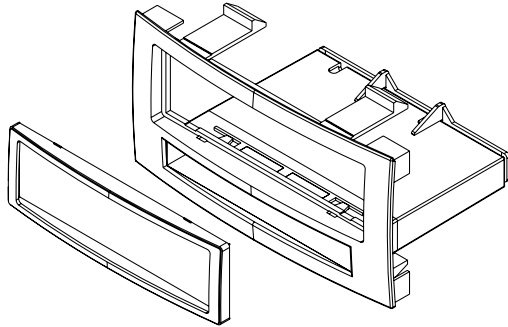

## INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche VW2340 Kit. This Kit was manufactured with the highest of quality standards.

### NOTES:

See your vehicle's instructions for any special tool your installation might require. Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

## STEREO INSTALLATION

1. Insert four (4) Volkswagen radio removal tools (DT-2) to release radio.
2. Remove radio and disconnect.

## FACTORY WIRING CODES

For Factory Wiring Codes go to: [www.scosche-cars.com](http://www.scosche-cars.com) or Call

### LIABILITY DISCLAIMER


This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (VW2340) in 2004-UP Volkswagen Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2003 SCOSCHE INDUSTRIES, INC.

SI 12/03 - VW2340 (3000003)

# SCOSCHE® VW2340 2004-UP VOLKSWAGEN TOUAREG KIT

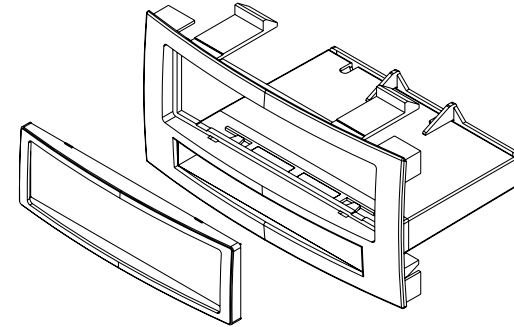

## INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche VW2340 Kit. This Kit was manufactured with the highest of quality standards.

### NOTES:

See your vehicle's instructions for any special tool your installation might require. Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

## STEREO INSTALLATION

1. Insert four (4) Volkswagen radio removal tools (DT-2) to release radio.
2. Remove radio and disconnect.

## FACTORY WIRING CODES

For Factory Wiring Codes go to: [www.scosche-cars.com](http://www.scosche-cars.com) or Call

### LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (VW2340) in 2004-UP Volkswagen Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2003 SCOSCHE INDUSTRIES, INC.

SI 12/03 - VW2340 (3000003)