


## MOUNTING THE RADIO

### DIN MOUNT

1. Use hardware supplied with radio to secure the mounting brackets.

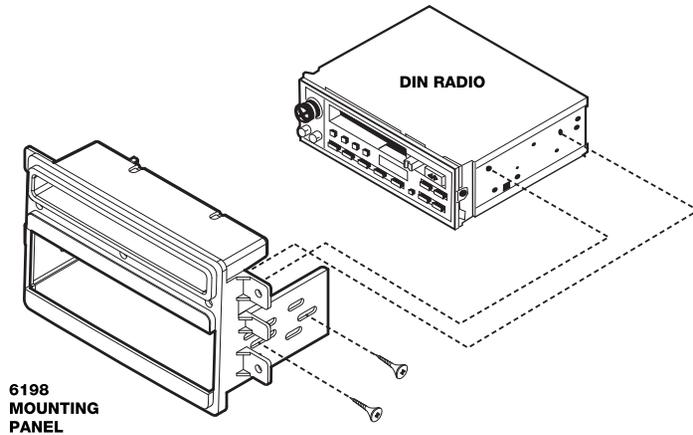

## RADIO REMOVAL

### 2007-UP LINCOLN NAVIGATOR W/O NAV RADIO REMOVAL

1. Using a panel removal tool, unsnap shifter trim bezel around shifter.
2. Extract (2) 7mm screws at bottom of panel.
3. Using a panel removal tool, unsnap radio trim panel unplug harness and remove.
4. Extract (4) 7mm screws securing the radio.


### 2007-UP MKX W/O NAV RADIO REMOVAL

1. Open center console lid, unclip and remove center console trim panel surrounding the shifter.
2. Extract (2) Phillips head screws from storage area then unclip and remove.
3. Unclip and remove the center trim panel as one assembly
4. Extract (4) 7mm screws securing the radio, disconnect and remove.

**SCOSCHE**

**LN1434B**

## IN-DASH DIN RADIO INSTALLATION KIT FOR 2007-UP LINCOLN NAVIGATOR AND MKX (NON-NAVIGATION)

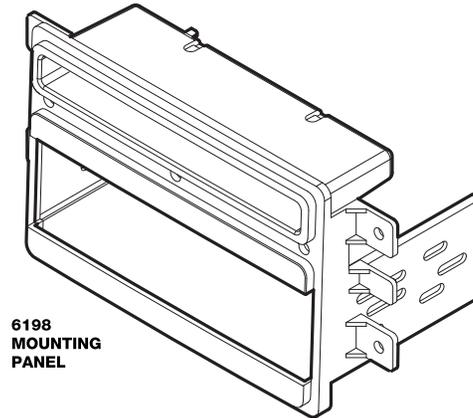

## INTRODUCTION / PRELIMINARY

This premium installation kit is for 2007-UP LINCOLN NAVIGATOR AND MKX without Navigation vehicles. Included are all the parts you need to mount your car stereo/cassette or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

### CAUTION:

Disconnect your vehicle's negative battery terminal before the installation to help prevent electrical damage. We recommend the use of a volt/ohm meter over a test light to check wiring. A test light or grounded wire probe can cause damage to the vehicle's computer and/or diagnostic systems. Avoid all factory airbag wiring - airbags can accidentally deploy causing serious injury or death.

### NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

## FACTORY WIRING CODES

For Factory Wiring Codes go to: [www.scosche-cars.com](http://www.scosche-cars.com)

### CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

**FD23B**  
2003-UP Ford



### LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (LN1434B) in 2007-Up LINCOLN NAVIGATOR AND MKX W/O NAV Kit Vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**  
© 2007 SCOSCHE INDUSTRIES, INC. SI 5/07 - LN1434B (3000003)